


ES2050

Wiring to Fleck valves

■ Wiring Diagram

Below you will find a standard wiring diagram for all type of Fleck valves to the control type ES2050.

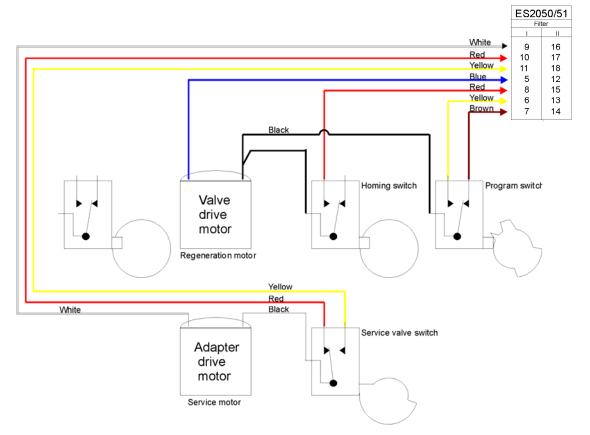

■ Programming

Here you will find which program steps are important for connecting Fleck valves to the control type ES2050.

Electrical control

Step 12 : Program step 12.1 at "Yes"

■ General remarks

- For duplex installations, use No-By-Pass-Piston For some types the color of a wire can differ from the standard.

■ Special remarks

Type 2750, 2850 and 3150

These type of valves do not have a service motor, so the corresponding terminals are not connected.

 $\underline{\textit{Type 9000}}$ This type of valve does not have a service motor and should only be connected to terminals 5, 6, 7 and 8.