

---

# ES 2070 TV

**Electronic controller for water softening units**



**Instruction Manual**

Software version 1.03

# CONTENTS

System Description.....	1
Illustration.....	2
Status and Regeneration	
messages.....	3
LED - display.....	3
LED - control lamps.....	3
LCD - display.....	3
Service status.....	3
Regeneration status.....	4
Changing and indication of program values.....	5
Hardness of the water supply.....	5
Current Time.....	6
Information DISPLAYS.....	6
Software version.....	6
Flush period. ....	6
Regeneration time.....	6
Regeneration restrictions.....	6
Additional programs.....	7
Unit capacity.....	8
Treated water produced.....	8
Inputs. ....	8
Outputs.....	9
Service - Telephone number.....	9
Maintenance.....	9
Water meters.....	9
Flow rate.....	9
Alarms / warnings.....	10
Programmed capacity exceeded.....	10
Electrical supply failure.....	11
Refill regenerant tank.....	11
Await regeneration.....	12
Pre contact (regeneration pre initiation warning) .....	12
Minimum inter regeneration time limit.....	13
Message: Maintenance.....	13
Manual regeneration initiation.....	14
Remote control.....	15
"water meter" Signal input.....	15
"regenerant chemicals low" Signal input.....	15
"wait " Signal input.....	15
"start" Signal input.....	16

Special functions.....	17
Duty changeover without regeneration.....	17
Regeneration of the standby unit.....	17
Regeneration stop.....	17
Fast program facility.....	18
Flush ON/OFF.....	18
Regeneration without counter reset.....	18
Setting and changing of initial values.....	19
1. Installation .....	20
2. Pre service regeneration.....	20
3. Prohibited regeneration period.....	21
Start on real time clock.....	22
4. Time controlled regeneration.....	23
5. Minimum time between regeneration's.....	24
6. Water meter.....	25
7. Incoming water supply hardness.....	26
8. Exchange capacity.....	27
9. Pre regeneration signalling.....	28
10. Electrical control.....	29
11. Number of valve switching pulses.....	30
12. Pulse timing.....	31
13. Regeneration times.....	31
14. Programmable outputs.....	32
15. Additional program 1.....	33
16. Additional program 2.....	34
17. Additional program 3.....	34
18. Flushing .....	35
19. Flow pulse .....	35
20. Alarm output .....	35
21. Warning output .....	36
22. Input 5 .....	36
23. "Start" input.....	37
24. Maintenance .....	37
Electrical connection details.....	38
Installation and commissioning.....	39
Technical specifications.....	40
Declaration of conformity.....	41



# System Description

The **ES 2070 TV** controller is designed for the monitoring and control of simplex (single exchange column), duplex (twin exchange columns) and triplex water softener installations.

Whilst a simplex installation can not provide softened water to service when the exchange column is in regeneration, a duplex or triplex installation is capable of providing treated water from one or two columns whilst the other is being regenerated. Duplex and triplex plants can be operated either in duty/standby mode (one (or two) unit(s) in service, the other either in regeneration or waiting to be called into service), or in parallel mode (two or three units in service except when one is regenerating). The regeneration of an exchange column is effected either by one central control valve or by means of a pilot system controlling individual valves.

There is also the possibility for switching filters online and offline depending on the flowrate. This means that filters will go into service or go out of service depending on the demand of softened water per hour.

Regeneration is usually initiated after a measured volume of water has passed through the plant, this volume is automatically calculated when the exchange capacity and the feed water hardness are programmed into the controller. Alternatively the regeneration cycle may also be initiated either, after a predetermined time period, or, by the operation of an external contact e.g. hardness monitoring equipment, or, push button, or, based on the real time clock. Because, particularly with simplex plants, there can be periods of the day when regeneration would be undesirable, e.g. periods of high demand, the control can be programmed so that regeneration cannot take place between certain times. When this postponed regeneration facility is in use, any initiation signal is stored and a display indicates the earliest time at which the already initiated regeneration cycle may commence.

An external contact may be used to:

- a) inhibit or abort a regeneration cycle
- b) open or close the service valve.

In order to prevent microbiological degradation of the unit due to prolonged periods of non operation, the stand-by unit of a duplex or triplex water softener installation can be regenerated immediately prior to being put into service.

A minimum time interval between successive regeneration cycles may be set, thus allowing brine systems to recover between regenerations, if necessary.


Six volt free relay contacts are available for control of valves, pumps, lamps, etc. or can be used for remote monitoring. All these outputs are programmable for the following functions :

1. Three additional program relays :  
Available before, during or after part of the regeneration cycle.
2. Flush relay :  
Can be used to open a dump valve flushing the plant to drain each time a pre-set volume of treated water has been produced.
3. Transport pump relay :  
Allows control of a valve or pump during the regeneration or service.
4. Regeneration relay:  
Contact available during the regeneration cycle.
5. Flow pulse relay :  
repeats the contact of the water meter for remote monitoring of water use.
6. Warning relay:  
Programmable warning contact.
7. Alarm relay:  
Programmable fault contact.



## Illustration

### Wall mounted type ES2070 TV

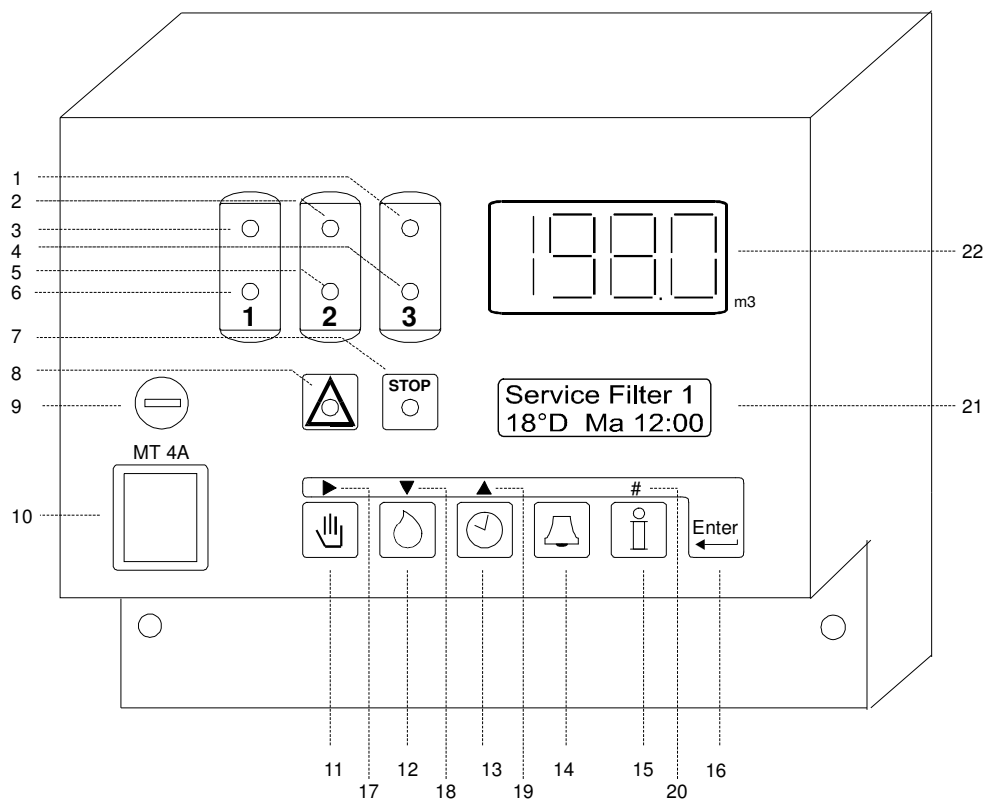


- |                         |                       |                      |                          |
|-------------------------|-----------------------|----------------------|--------------------------|
| 1 Service Filter 3      | 7 Warning             | 13 Real Time Clock   | 19 previous program step |
| 2 Service Filter 2      | 8 Alarm               | 14 Reset             | 20 Numerical input       |
| 3 Service Filter 1      | 9 Main fuse           | 15 Information       | 21 LCD -display          |
| 4 Regeneration Filter 3 | 10 Main switch        | 16 Programming       | 22 LED - display         |
| 5 Regeneration Filter 2 | 11 Regeneration start | 17 Move cursor       |                          |
| 6 Regeneration Filter 1 | 12 Water hardness     | 17 next program step |                          |



# Status and Regeneration messages

## LED - display.

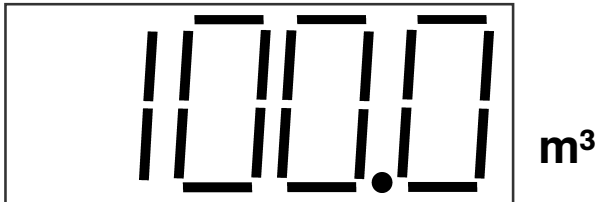

Whilst a unit is in service the LED - display indicates the remaining volume of water which can be softened before the next regeneration will be required.


When operating without a water meter, i.e. in time control, the display shows the full capacity between regeneration's.

During the regeneration of a simplex plant the display will read " 0 m<sup>3</sup> ".

If the maximum value of 9999 is exceeded the LED display will show the text "OFL" as long as the value is too high.

NB! There is an additional "decimal point" in the bottom right hand corner of the display. This flashes when flushing has been commenced (see step 18 in the basic program).

## LED - control lamps

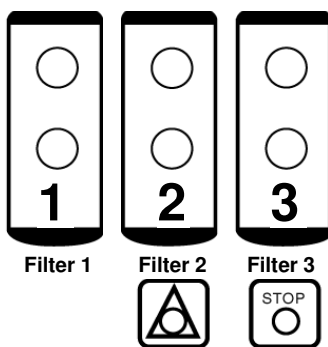


Coloured lamps are used to give the most important status indications:-

Unit 1 in service	(green)
Unit 2 in service	(green)
Unit 3 in service	(green)
Unit 1 in regeneration	(yellow)
Unit 2 in regeneration	(yellow)
Unit 3 in regeneration	(yellow)
Message	(red)
Fault	(red)

## LCD - display.

### Service status.

The first line of the LCD display indicates the actual condition of the plant, e.g. unit 1 in service.

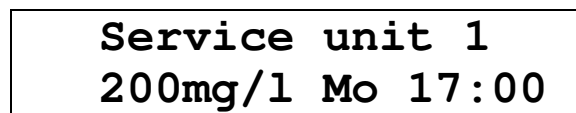

Usually during the service cycle the following information is given by the second line of the LCD:

- ☐ The left hand part of the line shows the incoming water hardness which has been programmed into the unit.
- ☐ The current time is displayed on the right.



However some operating regimes will produce alternative messages :-

or:

**Service unit 1**  
**72h Mo 17:00**

- ☐ If the control has been set to initiate a regeneration after a fixed time interval the second line of the display will show the number of hours remaining until regeneration will take place and the current time.

or:

**Service unit 1**  
**Flush-time 20s**

- ☐ The control can be programmed to give a signal, e.g. for a bleed valve, each time a predetermined volume of water has been supplied. When this output is active the second line of the display shows the remaining signal duration.

or:

**Fi.1 Fi.2 Fi.3**  
**50% 100% 100%**

- ☐ The remaining capacity of the filter is displayed in percent of the maximum capacity. This will only be shown when more than one water meter is selected (step 6.3 = Y).

### Regeneration status.

The first line of the LCD display indicates the actual condition of the plant, e.g. unit 1 in regeneration.

**Regen. unit 1**  
**Phase : 2 15m**

The second line of the LCD display shows, the regeneration step or phase in progress and the time remaining in the step. If "Step: 0" is displayed it means that the additional routine will operate before regeneration can commence, similarly "Step: E" indicates that the additional routine is continuing beyond the end of the regeneration cycle. If required the duration and remainder of the additional routine can be displayed briefly by pressing the INFO key (see page 6).

**Regen. unit 1**  
**Wait for regen**

At the start of a regeneration there will be checked if regeneration is allowed (prohibited regeneration, chemical tank empty, wait, minimum regeneration distance or ion exchange capacity exceeded).

The unit is then waiting for regeneration in this will be displayed in the LCD.




# Changing and indication of program values.

The most important program values can be recalled and, changed if required, by pressing a key.

## Hardness of the water supply.

Press the "Hardness" key, indicated by the symbol , to display the supply water hardness.

<b>Water hardness:</b> <b>220mg/l</b>	<div style="display: flex; justify-content: space-between; align-items: center;"> <span>▶</span> <span>#</span> </div> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 2px;"></div> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 2px; text-align: center;">  </div> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 2px;"></div> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 2px;"></div> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 2px;"></div> <div style="border: 1px solid black; width: 40px; height: 40px; margin: 2px;"></div> </div>
--	---

Should it be necessary to change the programmed value; the arrow key "▶" may be used to move the flashing cursor to the digit to be changed, and the Number key "#" to make the change.

A desired unit of hardness measurement may be selected (section 7 of the programming instructions), the following are available :-

Hardness units		Programmable range
°D	German hardness degrees	2 - 99
°F	French hardness degrees	4 - 199
°E	English hardness degrees	2 - 99
mg/l CaCO <sub>3</sub>	Milligrams per liter as CaCO <sub>3</sub>	40 - 1990
gpg	Grains per gallon	2 - 99

The controller automatically recalculates the capacity between regeneration's using the new value, at the initiation of the next regeneration cycle, as follows :-

$$\frac{\text{Column capacity [ mg/l CaCO}_3 \text{ /m}^3 \text{ of resin x m}^3 \text{ of resin]}}{\text{Supply Water Hardness [mg/l ~ CaCO}_3\text{]}} = \text{Softened Water Capacity [m}^3\text{]}$$

**Important Note!** If a hard water blending by pass is used so that the water meter indicates the blended water capacity, it is essential to subtract the final, blended, water hardness from the value to be inserted.


*Example:*

*supply water hardness = 300 mg/l CaCO<sub>3</sub> , blended water hardness = 120 mg/l CaCO<sub>3</sub>*

*Thus a value of 180 mg/l CaCO<sub>3</sub> (300 mg/l CaCO<sub>3</sub> - 120 mg/l CaCO<sub>3</sub>) must be programmed into the control.*



## Current Time.


Press the "Time" key indicated by the symbol , to display the current time.

**Current Time**  
**Mo 16:48**



Should it be necessary to change the programmed value; the arrow key "▶" may be used to move the flashing cursor to the digit to be changed, and the Number key "#" to make the change.

## Information DISPLAYS.

The "INFORMATION" key makes it possible to retrieve information, e.g. values from memory. Each time the "INFORMATION" key indicated by the symbol , is pressed a different piece of information is displayed :-

### Software version

**Software-version**  
**ES2070TV 1.02.00**

The software is regularly updated in the factory. Modifications are made in order to adapt the product in accordance technological changes and customer

### Flush period.

**Flushing**  
**5001 3501 20s**

The programmed volume between successive flush signals, the volume remaining to the next flush signal and the duration of the flush signal are displayed.

### Regeneration time .

**Regen.time [min]**  
**Σ 125 rest 15**

The duration of a complete regeneration cycle and the possible additional time which could be programmed are displayed.

### Regeneration restrictions.

**NoReg16:00-18:00**  
**IntRg72 MinRg4**

**NoReg 16:00-18:00** if the control has been set to prohibit regeneration between certain times (section 3 of the programming instructions), this part of the display shows the time between which regeneration is prohibited. Otherwise the display will read : NoReg---.



**IntRg 72** if the control has been set to initiate regeneration after a programmed time interval (section 4 of the programming instructions), this part of the display shows programmed time interval in hours. Otherwise the display will read : IntRg -.

**MinRg 4** if the control has been set to give a minimum period between successive regeneration's (section 5 of the programming instructions), this part of the display shows the programmed time interval in hours. Otherwise the display will read : MinRg -.

#### **Additional program 1**

<b>Additional prog1</b> <b>Step:2</b> <b>20m</b>
---

If the additional program 1 has been selected (section 14 of the programming instructions), the selected start time and the duration of the additional program are displayed, if "Step 0" is displayed the additional routine will operate before regeneration can commence, similarly "Step: E" indicates that the additional routine will continue beyond the end of the regeneration cycle. If the program is activated the display shows how long it has left to run.

If additional program 1 is not selected, "No additional program" will appear in the display.

#### **Additional program 2**

<b>Additional prog2</b> <b>Step:2</b> <b>30m</b>
---

If the additional program 2 has been selected (section 14 of the programming instructions), the selected start time and the duration of the additional program are displayed, if "Step 0" is displayed the additional routine will operate before regeneration can commence, similarly "Step: E" indicates that the additional routine will continue beyond the end of the regeneration cycle. If the program is activated the display shows how long it has left to run.

If additional program 2 is not selected, "No additional program" will appear in the display.

#### **Additional program 3**

<b>Additional prog3</b> <b>Step:2</b> <b>40m</b>
---

If the additional program 3 has been selected (section 14 of the programming instructions), the selected start time and the duration of the additional program are displayed, if "Step 0" is displayed the additional routine will operate before regeneration can commence, similarly "Step: E" indicates that the additional routine will continue beyond the end of the regeneration cycle. If the program is activated the display shows how long it has left to run.

If additional program 3 is not selected, "No additional program" will appear in the display.

**Unit capacity.**

**Unit capacity**  
**150 m3**

The calculated capacity between regeneration's is displayed.

**Treated water produced.**

**Treated water**  
**45367 m3**

The total volume of water which has been treated by the plant.

**Warning:** This counter can be reset to zero by a service engineer, consult service logs for details of the value prior to reset.

**Input 1.**

**Input 1**  
**WM1– WM2– WM3–**

Indicates the current status of each input, the inputs are :-

WM1= watermeter1 WM2= watermeter2 WM3= watermeter3

Inputs WM1, WM2 and WM3 are shown as active when the external contacts are closed.  
Active states are indicated by "|" after the input reference, inactive by "-".

**Input 2.**

**Input 2**  
**RC– WA– RS–**

Or:

**Input 2**  
**RC– SP– RS–**


Indicates the current status of each input, the inputs are :-

RC = water meter, WA = wait or SP =service stop, RS = regeneration start

Inputs WA, and RS are shown as active when the external contacts are closed, RC and SP are active when the external contact is open. Active states are indicated by "|" after the input reference, inactive by "-".




### Outputs.

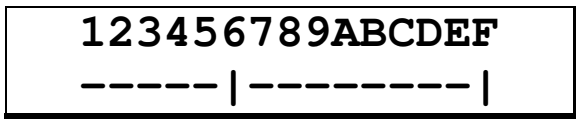

Indicates the current status of each output, " I " below an output number indicates an active output, " - " an inactive one.


### Service - Telephone number.

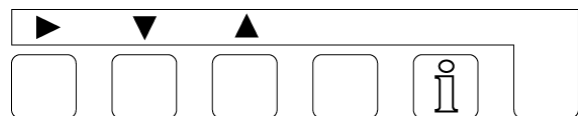

To change the telephone number.


Select the digit using the " ▶ " key, the number can then be changed by using either the " ▼ " or " ▲ " key.

### Maintenance.

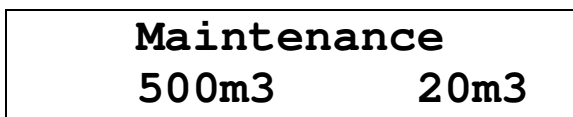


If the automatic maintenance required warning is programmed the preset maintenance interval is displayed on left hand side of the second line and the quantity of treated water produced since the last maintenance visit is displayed on the right hand side of the second line.

### Water meters.

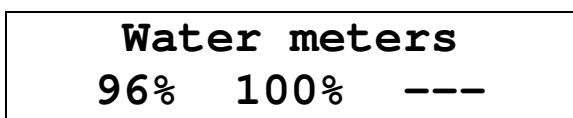

The remaining capacity of the filter is displayed in percent of the maximum capacity. When a filter is not selected this will be indicated by "---".

### Flow rate.

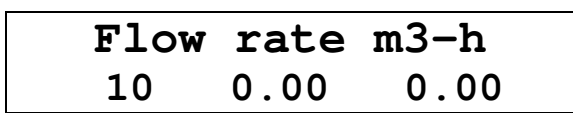

If programmed in step 1.3, the flow rate per filter will be displayed.

The displayed value is an average of the measured volume of softened water over the last minute.




# Alarms / warnings.

When the equipment is operating, various messages may appear in the display, this facility can be used to drive relay outputs or to give alarms or warnings. The relay positions are indicated by red control lamps bearing symbols for "Attention" for messages and "Stop" for malfunctions. The programming of these functions is described in sections 20 and 21 the programming instructions.

Descriptive text appears in the LCD display, in addition to the fault or warning light indication.

## Programmed capacity exceeded.

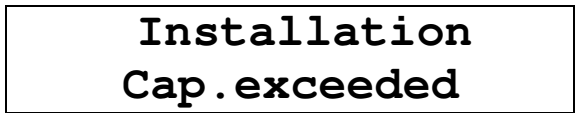

This message can only be displayed when controlling a duplex or triplex plant and appears if the working unit requires regeneration whilst the off line unit is in regeneration.

Possible causes when the plant is water meter controlled:


- ☐ Wrongly programmed capacity.
- ☐ Wrongly programmed incoming hardness.
- ☐ The water meter is faulty or of the incorrect type.
- ☐ Excessive demand for water e.g.. a large tank being filled very rapidly.

Possible causes when regeneration is remotely initiated by water analysis equipment signal:

- ☐ Faulty analytical equipment.
- ☐ Incorrect operation of analysis unit.
- ☐ Water analysis equipment too sensitive or giving spurious readings.
- ☐ Inadequate regeneration of the unit leading to shortfall in capacity.

**IMPORTANT!** In this condition if regeneration initiation is volume dependent, i.e.. by water meter, the on-line unit will begin to regenerate as soon as the other unit has finished it's regeneration.


If a salt saturator is being used and there is insufficient brine available for the second regeneration the second regeneration cycle must be prevented either by switching off the control or by giving a "wait" input. Once sufficient brine is available the second unit can be allowed to regenerate.

Press the "UNLOCK" key indicated by the symbol , in order to reset the warning or alarm relay. If the key is pressed a second time, the LCD display will also be reset, if there is only one filter in regeneration.



## Electrical supply failure.

**Signal**  
**Power supply**

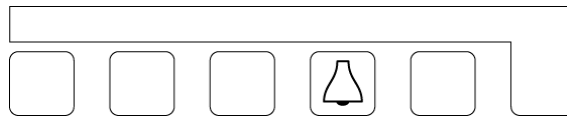

If there is a failure of the power supply no status information will be lost. The control panel "remembers" the condition it was in when the supply is interrupted.

**IMPORTANT!** If the plant is in a regeneration cycle when the power supply fails it is possible for the unit to become partially exhausted, by the passage of water to drain, if the water supply is maintained during the power failure.

In this situation the regeneration cycle should be terminated and a new cycle initiated first ensuring sufficient regenerant is available.

Press the "UNLOCK" key indicated by the symbol , in order to reset the warning or alarm relay and then reset the current time.


## Refill regenerant tank.


**Refill**  
**regenerant tank**



NOTE: This message can only appear only if there is a "regeneration chemicals" input connected.

Regenerant chemicals should be added to the regenerant tank.


**IMPORTANT!** One regeneration cycle will be performed after this message appears. and regeneration may still be initiated by pressing the "REGENERATION START" key indicated by the symbol .

Press the "UNLOCK" key indicated by the symbol , in order to reset the warning or alarm relay. The message will then clear when regeneration chemicals are available.


With duplex or triplex plant operating in standby mode the standby unit will automatically be brought into service even though regeneration of the exhausted column cannot take place.




## Wait regeneration.

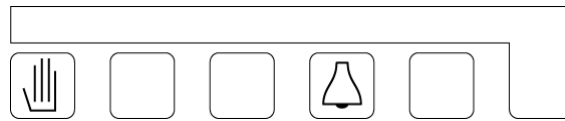

This message appears during the regeneration cycle only if there is a "Wait" contact, for example a water pressure switch intended to prevent regeneration when there is insufficient water pressure, connected.

Press the "UNLOCK" key indicated by the symbol  , in order to reset the warning or alarm relay. This will abort any regeneration cycle which is in progress.

Important Note: If the manual regeneration key indicated by the symbol  , is pressed the "Wait" signal is temporarily neutralized and the regeneration cycle will take place.

The alarm and warning relays and the LCD signals are cleared, as soon as the "wait" signal is removed. In order to prevent cancellation of the warning before the fault has been cleared it is not possible to manually reset the message relay.

With duplex or triplex installations, operating in standby mode, the stand by unit will be brought on-line if there is a "wait" signal when a regeneration cycle is initiated.


**IMPORTANT** If "EURO" is selected at step 10.1 of the programming sequence the outlet (pilot) solenoid valves will be closed in the service condition.

**IMPORTANT** Any additional program will be disabled.

## Pre contact (regeneration pre initiation warning).



This message will only be appear, if selected (section 10 of the programming instructions).


Press the "UNLOCK" key indicated by the symbol  , in order to reset the display and the alarm relay, if programmed. If the warning relay is programmed it cannot be cancelled manually. This is to prevent premature disconnection of, for example, water analysis equipment.

The display and the relay are automatically cancelled when the regeneration cycle is initiated.



## Minimum inter regeneration time limit.

**Minimum regene-  
ration period**

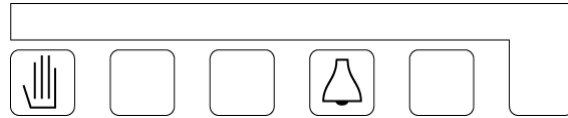

This message will only appear if a minimum interval between regeneration's has been programmed (section 5 of the programming instructions).

Possible causes when the plant is controlled by a water meter:

Wrongly programmed capacity.

Wrongly programmed incoming water hardness.

The water meter is faulty or of the incorrect type.

Excessive demand for water e.g. a large tank being filled rapidly.

Possible causes when activated by an external water analysis equipment signal:

Poor water quality from a column which has been on standby for some time, due to the contra ion effect. this can be overcome by fitting a flushing valve or circulation pump in the system or by reducing the sensitivity of the analytical equipment.


Press the "UNLOCK" key indicated by the symbol , to restore the display and reset the alarm relay, if programmed.

## Maintenance.

**Signal  
Maintenance**




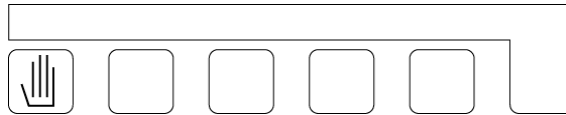
This message can only appear when the facility for giving an automatic warning that maintenance is due has been selected in section 24 of the programming sequence.

Press the "Reset" key with the  symbol in order to reset the alarm relay, if programmed, and call your maintenance company. The LCD display can only be cleared by trained personnel.



## Manual regeneration initiation.

A regeneration may be manually initiated at any time. Press the "REGENERATION INITIATION" key indicated by the symbol , after 5 seconds regeneration of the on line unit is initiated.



- ☐ With duplex or triplex installations operating in standby mode the stand by unit is brought into service.
- ☐ If the prohibited time function is already activated the regeneration will initiate, i.e. the prohibited time function will be overridden.
- ☐ The counter is reset to the calculated capacity after the regeneration.
- ☐ If the unit has been set to initiate a regeneration after a fixed time has elapsed, (section 4.1 of the programming instructions) the interval timer is reset to its programmed value and restarted.
- ☐ If a minimum time between regeneration's has been programmed (section 5.1 of the programming instructions), the timer will be overridden and reset.



# Remote control.

The following functions may be remotely controlled by switch contacts connected to the terminal strip of the controller :-


## **"Watermeter1", "Watermeter2" and "Watermeter3" inputs (WM1,WM2,WM3).**

"Contact head"/"reed" water meters give a pulse each time a fixed volume of water has registered e.g. of every 100 litres. These pulses are counted by the controller and once the calculated capacity has been supplied a regeneration is initiated.

The controller cannot accept more than 10 pulses per second.

## **"Regenerant chemicals low" input (RC).**

This input signal can be used to monitor the regenerant tank and prevent regeneration if there are insufficient chemicals available.

The warning will not immediately prevent a regeneration, because it is assumed that there will be sufficient chemicals present for one regeneration. By pushing the key "REGENERATION INITIATION" indicated by the symbol , it will be possible to override the warning and initiate a regeneration.

IMPORTANT! The input signal facility does not monitor the regenerant tank until 3 hours after a regeneration has taken place, however if a regeneration is initiated during this time the regenerant tank is checked. The facility is disabled during regeneration.

## **"Wait " input (WA).**

This input can be used for either of two different functions (see section 22 of the programming sequence).


### **Function WA : Active during the regeneration**

The input signal can be used to hold off or stop a regeneration cycle. The input is active only during a regeneration cycle.

With duplex or triplex installations, when the signal is active, regeneration of an exhausted unit can not be initiated but, if the plant is operated in standby mode, the standby unit will be brought on line.

After the "WAIT" signal is cleared the regeneration cycle is commenced or continued.



When "REGENERATION INITIATION" indicated by the symbol , is pressed, the "WAIT" signal will be suspended for the duration of the regeneration cycle.

When using the fast program key facility, (see special functions page 17) it is possible to step forward to the next regeneration step.

**IMPORTANT** If "EURO" is selected at step 10.1 of the programming sequence the outlet (pilot) solenoid valves will be closed in the service condition.

**IMPORTANT** Any additional program will be disabled.

**Function SP: Active during service.**

The service valves will open or close in response to the input.

APPLICATION: Treated water storage tank level control.

**"Start" input (RS).**

This input signal can be used to initiate a regeneration of the plant by remote means, e.g. a push button, or water monitoring equipment. When operating a duplex or triplex plant in standby mode the standby unit will be brought on line. A start-up delay can be set at program step 23.2

If a minimum interval between regeneration's has been programmed (section 5 of the programming instructions) if an attempt is made to initiate a regeneration during this interval the "minimum regeneration time" warning will be displayed. Regeneration will not be initiated, manual initiation will be required and the alarm must be manually reset. (see page 13.)

On a simplex plant the input is disabled during regeneration and only becomes available again once the regeneration is complete and the time entered at program step 23.1 has elapsed.

In double or triple filter systems the input is blocked after the start of regeneration for the time entered at program step 23.1. Then if a start signal is present the report "system overloaded" is shown, since evidently both filters are exhausted.


**NOTE** The time entered at program step 23.1 is also activated after a power loss to allow for a measuring device to take a new measurement.





# Special functions.

These functions should only be used by a trained specialist, ill considered use of these functions will cause operating problems.
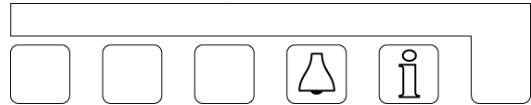
## Duty changeover without regeneration.





Press the "UNLOCK" key  and the "INFORMATION" key  simultaneously. On a duplex or triplex plant duty changeover takes place after 2 seconds delay.

**IMPORTANT** There are separate counters for each exchange column. If an almost exhausted column is brought into service, then that unit may require regeneration whilst the other unit is in regeneration. The "period capacity exceeded" warning will be displayed.



## Regeneration of the standby unit.



Press the "TIME" key  simultaneously with the "UNLOCK" key . On a duplex or triplex plant regeneration of the stand by unit is initiated after 2 seconds delay.

## Regeneration stop.



Press the "REGENERATION INITIATION" key  and the "UNLOCK" key  simultaneously. The regeneration in progress will be aborted after 2 seconds and the plant will be return to the normal service condition.



**IMPORTANT** Pilot stagers for manifold valves may not have an automatic "return to service" facility when the control is returned to the service condition, this type of stager will hold the plant in regeneration mode and will no longer be synchronized with the controller.

**IMPORTANT** If regenerant has been drawn into the plant it will be necessary to rinse the regenerant's out before allowing the plant to supply water to service.



## **Fast program facility.**



Press the "REGENERATION INITIATION" key  and the "INFORMATION" key  simultaneously, after 2 seconds delay the internal timer switches from minutes to seconds for the remainder of the current program step, at the end of the current step the timer returns to normal, the next regeneration step proceeds normally.


**IMPORTANT** When cycling through regeneration steps, sufficient time must be allowed between steps to permit the regeneration control valve to synchronize with the controller.

**IMPORTANT** If regenerant has been drawn into the plant it will be necessary to rinse the regenerants out before allowing the plant to supply water to service.

**NOTE** The fast program option can not be initiated during a pulse for pulse or external control.

## **Flush ON/OFF.**





Press the "Unlock" key , and the "ENTER" key simultaneously.

After 2 seconds delay the flush will commence. If the flush is already in operation, using this key combination will end the flush period.

## **Regeneration without counter reset.**



For maintenance purposes, it is possible to initiate a regeneration which will not reset the counter or recalculate the operating capacity.

Press the "HARDNESS" key  simultaneously with "UNLOCK" key .

With simplex installations regeneration is initiated without resetting the counter and without recalculation of the unit capacity.

With duplex or triplex installations regeneration of the stand by unit is initiated. If regeneration of the duty unit is required first initiate duty changeover as described above (see "**Duty changeover without regeneration initiation**"). The "**Regeneration stop**" and "**Fast program**" facilities are both available, in this regeneration cycle.

**IMPORTANT** If regenerant has been drawn into the plant it will be necessary to rinse the regenerants out before allowing the plant to supply water to service.




# Setting and changing of initial values.

During the commissioning of a water softener the basic parameters for the installation must be programmed into the controller. These values can be modified later but they will not be corrupted or lost by an electrical supply failure.

- ☐ Changes to the basic values should only be made by trained personnel.
- ☐ Note the basic values in the spaces provided in the programming diagram and keep this handbook in a safe place for use by service and maintenance personnel.
- ☐ A change to the basic values is possible at any time. The majority of the changes however only take effect after initiation of the next regeneration cycle.
- ☐ A number of keys have dual functions.

1. Press the "ENTER" key. In order to overwrite the existing program this key must be held down for 4 seconds, then the basic values are ready for modification.

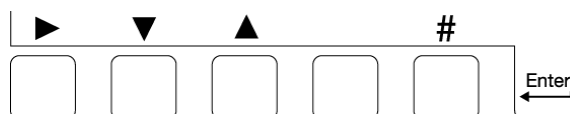

The following message appears in the LCD



the following message appears four seconds later



NOTE For steps 2 and 3 the "ENTER" key must be held down.


2. To change the **language in the LCD** display hold the "#" key down and use the "▶" key to move the cursor to the symbol of the country with the desired language.
3. The first and succeeding steps of programming can be entered by pressing the "▼" key.
4. With the "▲" key it is possible to return to the preceding step.

**Note:** The controller is still in the program mode. Do not keep the "ENTER" key pressed down any longer. To cease programming press the "ENTER" key at any time. The programming mode will be abandoned automatically if no key is pressed for approximately two minutes.

5. With the "▶" key it is possible to move the cursor, YES/NO choices can be made affirmative by moving the cursor to the Y key, and negative by moving it to the N key.
6. To modify numeric values move the cursor to the digit to be modified and then use the "#" key to change the value.

## IMPORTANT

If a filter is in regeneration or waiting for regeneration the programming function will be disabled.

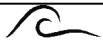

## 1. Installation

<b>Step no:</b>	<b>1.1</b>
<b>Filter:</b>	<b>1  2- 3-</b>

Select the number of the connected filtercolumn(s).

<b>Step no:</b>	<b>1.2</b>
<b>Number in serv</b>	<b>1</b>

On duplex or triplex installations program how many columns should be in service position.  
(Only to program if more than one filter is selected in step 1.1)

<b>Step no:</b>	<b>1.3</b>
<b>Flow depend.</b>	<b>Y/N</b>

Indicate whether the number of filters in operation depends on the water flow. This step is only programmable if multiple filters are programmed in step 1.2.  
A water meter is required per filter; therefore, the steps 6.1 and 6.3 are not programmable.

<b>Step no:</b>	<b>1.4</b>
<b>Main valve on</b>	<b>Y/N</b>

In simplex or parallel mode you can program if the service valve is opened when the unit is waiting for regeneration because of a empty chemical tank.

<b>Step no:</b>	<b>1.5</b>
<b>Main valve on</b>	<b>Y/N</b>

In alternating or parallel mode you can program if the service valve is opened when an other unit is in regeneration.  
If the installation is programmed for regeneration before service or EURO valve with pre flushing the valve is always closed during this situation.

## 2. Pre service regeneration.

<b>Step no:</b>	<b>2.1</b>
<b>Pre regen.</b>	<b>Y/N</b>

If the treated water is used for drinking purposes then it is important to prevent bacterial growth. A stand by unit could possibly cause contamination due to bacterial growth during a long period off line.  
Regeneration can be programmed to take place immediately prior to the unit coming into service.  
Regeneration is held in abeyance until the duty unit is "exhausted".

**Important** The additional water which will be supplied at the end of the duty period must be allowed for in setting the operating capacity if this facility is used.



### 3. Prohibited regeneration period.

**Step nr: 3.1**  
**Time delay B A N**

A regeneration may be started at any time of the day but, for operational reasons, there may be times when regeneration would be undesirable e.g. the water pressure may be too low or demand may be high. In standby duplex mode, the standby unit will be brought into service and the exhausted unit will regenerate at the end of the prohibited period.

If this step is programmed at No then you will go to step 3.6.

*B = During the programmed days (step 3.2) and times (step 3.3 and 3.4) a regeneration will be blocked.*

*A = During the programmed days (step 3.2) and times (step 3.3 and 3.4) a regeneration will be allowed.*

*N = No time control for a regeneration start*

**Step no.: 3.2**  
**S- M- T- W- T- F- S-**

Select the day when the time control for regeneration must be active. “-“ = not activated, “|” = activated

**Step no: 3.3**  
**Time1 6:30**

Enter the time at which the blocked / allowed period commences.

**Step no: 3.4**  
**Time2 18:30**

Enter the time at which the blocked / allowed period ends.

**Step no: 3.5**  
**Main valve on Y/N**

For a simplex installation, it is possible to choose whether the outlet/supply valve (SV) remains open until regeneration starts or is closed immediately.

If the outlet valve remains open, it is important to ensure that the exchange column is able to deliver treated water if the regeneration warning is given before the column is exhausted, (see programming steps 9.1 – 9.3).

If the outlet valve is closed immediately provision must be made for the lack Of water or a reservoir of treated water must be provided sufficient for the prohibited period and the regeneration period

With a duplex or triplex plant operating in parallel then a decision must be made whether the outlet valve for the exhausted column should remain open until the start of the regeneration or should close leaving only one unit in service.

If the installation is programmed for regeneration before service or EURO valve with pre flushing the valve is always closed during this situation.



### 3. Starting on real time clock

<b>Step no.:</b>	<b>3.6</b>
<b>Time start</b>	<b>Y/N</b>

A regeneration can be started depending of the real time clock.  
There is the possibility for programming three starting times at one day  
If this step is programmed at No then you will go to step 4.1.

<b>Step no.:</b>	<b>3.7</b>
<b>S- M- T- W- T- F- S-</b>	

Select the day(s) for starting regeneration of the unit in service at the time programmed in step 3.8. "-" = not activated, "|" = activated

<b>Step no.:</b>	<b>3.8</b>
<b>Starttime</b>	<b>00:30</b>

Enter the time at which the unit in service will go into regeneration.

<b>Step no.:</b>	<b>3.9</b>
<b>S- M- T- W- T- F- S-</b>	

Select the day(s) for starting regeneration of the unit in service at the time programmed in step 3.10. "-" = not activated, "|" = activated

<b>Step no.:</b>	<b>3.10</b>
<b>Starttime</b>	<b>05:30</b>

Enter the time at which the unit in service will go into regeneration.

<b>Step no.:</b>	<b>3.11</b>
<b>S- M- T- W- T- F- S-</b>	

Select the day(s) for starting regeneration of the unit in service at the time programmed in step 3.12. "-" = not activated, "|" = activated

<b>Step no.:</b>	<b>3.12</b>
<b>Starttime</b>	<b>10:30</b>

Enter the time at which the unit in service will go into regeneration.



## 4. Time controlled regeneration

<b>Step no:</b>	<b>4.1</b>
<b>Interim start</b>	<b>Y/N</b>

Regeneration can be initiated at fixed time intervals. This operating mode is selected if a water meter is not desired either because the water usage is regular and predictable or for operational reasons.

Sometimes this mode of operation is selected where there is a danger of micro organism formation within the unit due to a prolonged standby period. The facility is used to override volume dependant or quality dependant initiation.

At each time controlled regeneration, the water meter counter is reset.  
If this step is programmed at No then you will go to step 5.1.

<b>Step no:</b>	<b>4.2</b>
<b>Period</b>	<b>72h</b>

A time period of between 1 to 999 hours between regeneration's may be programmed.

**IMPORTANT!** With installations utilising brine tanks it may be necessary to await the availability of full strength brine, the actual time will depend upon the type of brine system used but could exceed 4 hours.



## 5. Minimum time between regeneration's.

<b>Step no:</b>	<b>5.1</b>
<b>Min.reg.time</b>	<b>Y/N</b>

Based on the capacity of the installation, the incoming water hardness and flow rate, the minimum time between two regeneration cycles can be calculated.

With installations utilising brine tanks it may be necessary to allow time for full strength brine to be produced, the actual time will depend upon the type of brine system used but could exceed 4 hours.

When there are very large requirements of water, for instance when filling a large tank, if this minimum time requirement is not taken into account and the plant may be insufficiently regenerated because of unsaturated brine.

If a water softener installation is also equipped with water hardness monitoring equipment, the minimum time period between regeneration's must be programmed. Otherwise, should there be a defect e.g. with the monitoring equipment the unit will continuously regenerate.

<b>Step no:</b>	<b>5.2</b>
<b>Period</b>	<b>4h</b>

The minimum time between two regeneration's can be anything between 1 and 999 hours.

<b>Step no:</b>	<b>5.3</b>
<b>Make up reg</b>	<b>Y/N</b>

You can determine whether the regeneration is to be carried out immediately after the end of the 'minimum regeneration distance'(program at Yes) or whether the next regeneration has to be started manually. (program at No).

<b>Step no:</b>	<b>5.4</b>
<b>Main valve on</b>	<b>Y/N</b>

When the message 'minimum regeneration distance' is displayed, you can determine whether the service valve is to stay open until regeneration is initiated with the possibility that it will supply incompletely treated water or whether that valve should close with the result that the system does not supply any more water.

Note : Not selectable in alternating service as this system switches over to the standby filter.



## 6. Water meter

<b>Step no:</b>	<b>6.1</b>
<b>Watermeter</b>	<b>Y/N</b>

Using a contact head/reed water meter, the volume of treated water produced is measured and, when the pre-programmed quantity of water has been supplied, regeneration is initiated.

The LED display usually shows the capacity remaining i.e. the amount of water which can be treated before regeneration is required. This step is not programmable if step 1.3 is programmed at Yes.

NOTE: If no water meter is used (e.g. regeneration takes place only at time intervals), the system's full capacity is always shown.

<b>Step no:</b>	<b>6.2</b>
<b>Pulse per.</b>	<b>100,01</b>

The impulse rate (k factor) of the water meter can be programmed for values of between 0,1 and 9999,9 litres per pulse/contact closure.

<b>Step no:</b>	<b>6.3</b>
<b>WM &gt; 1</b>	<b>Y/N</b>

You can determine whether the installation has one water meter or each unit has his own water meter.

If programmed for one water meter the water meter should be connected to the input WM1.

If programmed for more water meters the water meter should be connected to input corresponding to the unit.

NOTE: This step is not programmable if step 1.3 is programmed at Yes.

The next steps are only programmable if step 1.3 is programmed at Yes.

<b>Step no:</b>	<b>6.4</b>
<b>Limit</b>	<b>10.0m3/h</b>

Program the limit for switching on filter 2. Filter 3 will go into service when the measured flow rate is above this limit \* 2 (value between 0,1 en 999,9 m3/h)

<b>Step no:</b>	<b>6.5</b>
<b>Hyster.</b>	<b>1.0m3/h</b>

A filter will be switch off after the measured flow rate is below the limit value minus the hysteresis.

For filter 3 this value is : limit \* 2 – hysteresis \* 2. (program a value between 0 and 99,9 m3/h)

<b>Step no:</b>	<b>6.6</b>
<b>Delay</b>	<b>180s</b>

Program the delay for switching on and off the filters after a measured value above or below the calculated limits (program a value between 1 and 999 seconds).



## 7. Incoming water supply hardness.

Any of the following units of measurement of water hardness can be used when operating the controller:

°D = German water hardness      mg/l = parts per million  $\text{CaCO}_3$   
 °F = French water hardness      gpg = grains per gallon  
 °E = English water hardness

A conversion table for these units of water hardness is given below:

	°D	°F	°E	mg/l $\text{CaCO}_3$	gpg	mmol/l
°D	1	1,78	1,25	17,85	1,04	0,18
°F	0,56	1	0,70	10,00	0,58	0,10
°E	0,80	1,43	1	14,30	0,83	0,14
Mg/l $\text{CaCO}_3$	0,056	0,10	0,07	1	0,058	0,01
gpg	0,96	1,71	1,2	17,1	1	0,17
mmol/l	5,60	10	7,02	100	5,82	1

**IMPORTANT!** The incoming water hardness is not entered as part of this basic program routine. Please see page 4 for details of how to program in the hardness.

**Step no: 7.1**

**°D °F °E mg gpg**



## 8. Exchange capacity.

<b>Step no:</b>	<b>8.1</b>
<b>Capacity</b>	<b>1800</b>

The unit of exchange capacity is dependant on the unit chosen in step 7. It gives the amount of softened water in m<sup>3</sup> as indicated in the chosen unit of hardness.

The amount of water which can be softened by each unit is automatically calculated as follows:

$$\frac{\text{Exchange capacity [mg CaCO}_3\text{]} \times 1000}{\text{Water hardness [mg/l CaCO}_3\text{]}} = \text{Softened water capacity [m}^3\text{]}$$

Example 1:

$$\frac{36000 \text{ mg CaCO}_3 \times 1000}{360 \text{ mg (l CaCO}_3\text{)}} = 100 \text{ m}^3$$

or

Example 2:

$$\frac{2020 \text{ }^\circ\text{F m}^3}{40 \text{ }^\circ\text{F}} = 50,5 \text{ m}^3$$

The exchange capacity can be entered as a numeric value in the range of 10 and 655,350.

**IMPORTANT** Regardless of whether the installation is a simplex, duplex or triplex plant only enter the capacity of one exchange column.

<b>Step no:</b>	<b>8.2</b>
<b>Exc.cap.cor.</b>	<b>Y/N</b>

Here you can program if the remaining exchange capacity of the filter that stays in service will have a Correction, at the moment, an other will go into regeneration.

When programmed at Yes :

- 2 filters in service : The filter that stays in service will be corrected to 50% of its exchange capacity when its remaining exchange capacity is above 50%.
- 3 filters in service : The next filter that will go into regeneration will be corrected to 33% of its exchange capacity when its remaining exchange capacity is above 33%.

When programmed at No there will be no correction as described above.

This program step will be skipped if only one filter is in service.



## 9. Pre regeneration signalling

<b>Step no:</b>	<b>9.1</b>
<b>Pre contact</b>	<b>Y/N</b>

It is sometimes necessary to give a warning or to signal to another unit before the duty water softener is exhausted.

<b>Step no:</b>	<b>9.2</b>
<b>Capacity [%]</b>	<b>80</b>

A limit value of anything between 1% and 99% of the operating capacity may be selected. For example, with a capacity of 180m<sup>3</sup> between regeneration's and a selected limit of 80% the contact will be made at 144m<sup>3</sup>.

<b>Step no:</b>	<b>9.3</b>
<b>Reg.start</b>	<b>Y/N</b>

This facility may be used to initiate regeneration of a simplex plant, and is used in conjunction with a prohibited regeneration period. (Section 3 above.) Regeneration will start at a fixed time, the end of the regeneration prohibited time, but only after a predetermined volume of water has been treated.

This allows a quantity of treated water to be held in reserve for use the following day. For example with a capacity of 180 m<sup>3</sup> and pre contact at 80% there would be a treated water reserve capacity of 36 m<sup>3</sup>. When less than 36 m<sup>3</sup> of treated water capacity remains a regeneration will take place when the next permitted regeneration time is reached.

**IMPORTANT** Untreated water must not be allowed to reach the user, it is important that there be sufficient reserve capacity to provide water during the time between the pre contact and the delayed regeneration cycle.



## 10. Electrical control.

Remote control valves and stagers available in the market may be controlled in various ways, there are important differences:

1. Alternating switch
2. Pulse switching
3. Remote control
4. EURO control

<b>Step no: 10.1</b> <b>Alt Imp Ext EURO</b>
---

You can determine the electrical control of the used control valve.

### Alternating switch




<b>Step no: 10.2</b> <b>High current Y/N</b>
---

For control valves who needs high current, it could be necessary to switch regeneration motor and service motor not at the same time. In this step you can program if the regeneration motor(s) and service

motor(s) are switched on one after the other.


With this type of control electrical power is switched from connections 5-6 to 5-7 (resp. 14-15 and 14-16, 23-24 and 23-25) on the main terminal strip as soon as the contact is made.

The following diagrams illustrate the operation of the various types of stager connected in this manner. The diagrams do not show the service condition which follows immediately after regeneration end

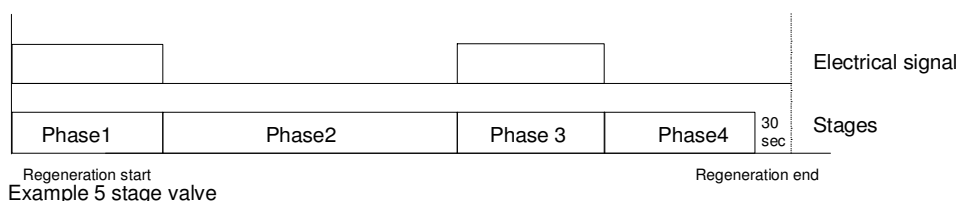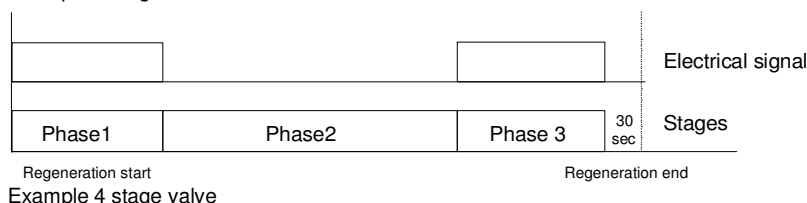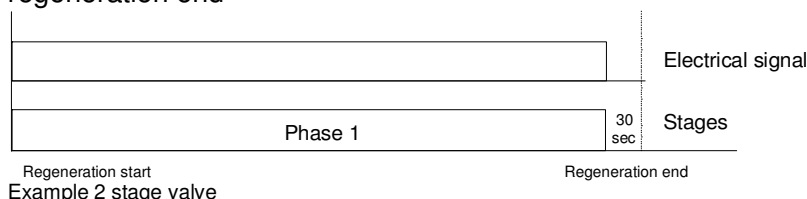

### Pulse switching.


With this type of control a pulse is given across connections 5-7 (resp. 14-16, 23-25), as soon as the next switching step is activated.

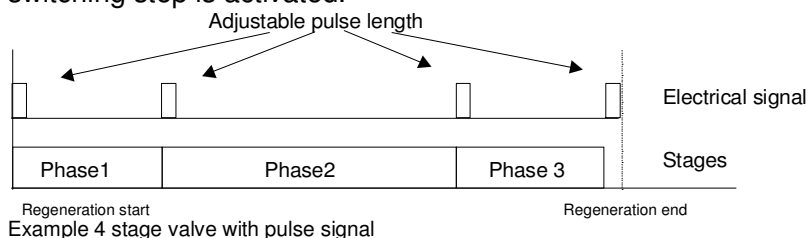




### Remote Control.

With the remote control facility, the central control valve only requires a starting pulse on the connections 5-7 (resp.14-16,23-25) to perform the complete regeneration cycle. The times for the different regeneration steps are, generally speaking, catered for by the switching arrangements of the central control valve. The same times must also be entered in at step 13 of the programming in order for the control to follow the regeneration cycle. An exact synchronization of the central control valve and the indication on the display is however not possible

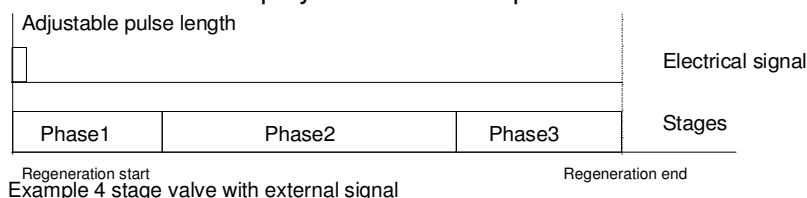

### EURO Control

The EURO valve is controlled by two electric valves. These are utilized to changeover the columns during regeneration initiation. The terminals are numbered respectively for the duplex or triplex column (5-7 and 8-10, 14-16 and 17-19, 23-25 and 26-28).

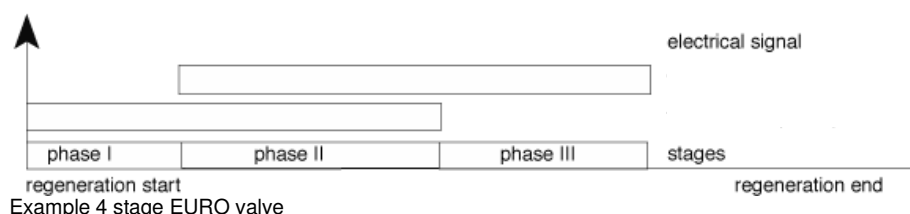

<b>Step no:</b>	<b>10.3</b>
<b>Flushtime</b>	<b>2m</b>

With duplex or triplex installations in alternating mode, it is possible to flush the standby stream before entering service. The length of the flush can be programmed between 1 and 99 minutes. Should the step be programmed at value 0 (Zero) then no flush will occur.

This step will be skipped if the installation is programmed for regeneration before going into service or when programmed for flow rate depending mode.

## 11. Number of valve switching pulses .

<b>Step no:</b>	<b>11.1</b>
<b>Stage</b>	<b>4</b>

Remote control valves and pilot staggers are available with up to 9 steps.

In this section of programming the number of control switch steps must be entered.

**IMPORTANT** Manufacturers often describe their product as a 5 stage valve with 4 switching stages when there is a change of function, usually in the chemical injection step, two different functions may then be achieved by one valve position i.e. injection and slow rinse.

Enter the number of switching steps required using the # (?) key.

Note : this step is skipped if the electrical control is programmed at EURO valve.



## 12. Pulse timing

<b>Step no:</b>	<b>12.1</b>
<b>Pulse per.1</b>	<b>50s</b>

If the pulse control in remote control mode is selected, the pulse time for each period must also be entered. Values in the range of 1 to 999 seconds can be programmed.

IMPORTANT. When using pulse control the pulse duration must not be longer than the shortest time step (see section 13, regeneration times).

IMPORTANT. Select the pulse to be programmed using the "#" key. Then use " " key to select the digit to be changed and use the "#" to change the value.

## 13. Regeneration times.

The duration of each stage of regeneration must be programmed. The number of stages was selected in programming section 11. No times need to be programmed for the "SERVICE" condition.

In this step the number and duration of the regeneration step must be entered.

Any value between 1 and 999 minutes can be programmed in.

<b>Step no:</b>	<b>13.1</b>
<b>Time phase 1</b>	<b>10</b>

For example for a 3 step regeneration.


Backwash                      Stage 1: 10 min.

Injection/slow rinse        Stage 2: 60 min.

Fast rinse                     Stage 3: 15 min.

To adjust the step times, position the cursor to the step number using the "►" key, select the required step using the "#" key then position to the figure to be changed using the "►" key and alter the value using the "#" key.

To adjust another step time, reposition the cursor and proceed as above.

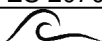

## 14. Programmable outputs

There are six programmable potential free outputs for the following output functions :

AD1 = Additional program 1	RE = Regeneration output
AD2 = Additional program 2	AL = Alarm
AD3 = Additional program 3	MF = Warning
FL = Flushing	FP = Flow pulse
HP = Transport pump	- = No function

**AD1, AD2, AD3 = An additional program** during regeneration. This allows control of a valve or pump before, during or after a regeneration. It is possible to program the output to operate for a time period of between 1 and 999 minutes. (Resp. Program step 15.1-15.3, 16.1-16.3 and 17.1-17.3)

**RE = Regeneration output** during regeneration (no further programming step).

**AL = Alarm output.** (Program step 20.1 and 20.2)

**MF = Malfunction output** . (Program step 21.1 and 21.2)

**FL=A timed flush signal** which can be used to open a dump valve flushing the plant to drain each time a pre-set volume of treated water has been produced. It is possible to program duration's of between 1 and 999 seconds and volumes between successive flushes of between 1 and 99,999 litres (Program step 18.1-18.2)

**FP = Flow pulse** Every pulse of each water meter will be passed to the output with programmable pulse time (Program step 19)

**HP=High pressure** pump allows control of a valve or pump during the regeneration or service. The initiation will be controlled by the input "SP".


<div>Step no: 14.1</div> <div>AD1 FL HP -</div>	(Output function for OUT1)
<div>Step no: 14.2</div> <div>AD2 FL FP -</div>	(Output function for OUT2)
<div>Step no: 14.3</div> <div>AD3 FP HP -</div>	(Output function for OUT3)
<div>Step no: 14.4</div> <div>RE FL HP -</div>	(Output function for OUT4)
<div>Step no: 14.5</div> <div>AL FL FP -</div>	(Output function for OUT5)
<div>Step no: 14.6</div> <div>MF FP HP -</div>	(Output function for OUT6)



## 15. Additional program 1

<b>Step no:</b>	<b>15.1</b>
<b>Start phase:</b>	<b>2</b>

It is possible to use the additional program before the start of the actual regeneration, that means before the regeneration valve is initiated. In this case program Start phase: 0

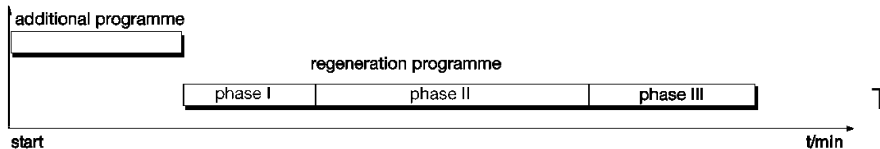


Example: additional program before the actual regeneration

This function can also be used to flush out the stand by unit of a duplex or triplex plant prior to bringing it into service.

The additional program and a regeneration cycle can also begin simultaneously. The additional program can either be shorter, the same or of even longer duration than the regeneration program.


In this case program in the phase of regeneration which is to start simultaneously with the start of the additional program.

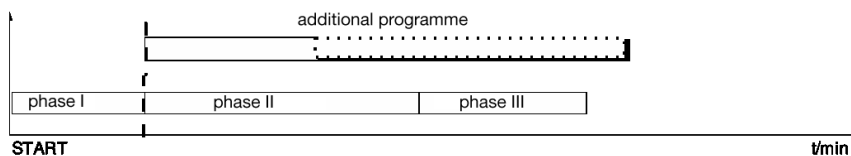

Example: additional program starts with the second step of regeneration

The additional program can follow the regeneration cycle, so that, for example, regenerant tanks may be refilled, if required.

In this case program Start phase: E

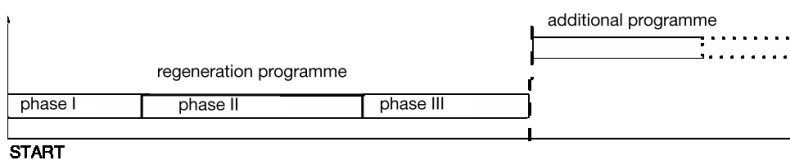

Example: additional program follows the regeneration cycle

<b>Step no:</b>	<b>15.2</b>
<b>Time</b>	<b>20m</b>

The duration of the additional program (Relay on / Relay off) can be programmed for between 1 and 999 minutes.



<b>Step no:</b>	<b>15.3</b>
<b>Switch SV</b>	<b>Y/N</b>

If the additional program is active before the actual regeneration ("pre regeneration" and "flushing before service" are not programmed) then a decision has to be made :

For a simplex installation,

When should the outlet valve be closed? At the start of the additional program? (Change over "Y") Or as the additional program finishes, i.e. at the initiation of the regeneration cycle? (Change over "N")

For a duplex or triplex installation,

Operating in stand by mode should the stand by unit be brought on at the start of the additional programme (Change over "Y") or at the start of the regeneration of the exhausted unit (Change over "N")

**ATTENTION** : If the outlet valve is closed during the additional program before the actual regeneration, then the check for allowing regeneration will be made before starting the additional program otherwise this check will be made after the additional program.

## 16. Additional program 2

See also Step 15 for details.

<b>Step no:</b>	<b>16.1</b>
<b>Start phase:</b>	<b>2</b>

You can determine the start phase for additional program 2.

<b>Step no:</b>	<b>16.2</b>
<b>Time</b>	<b>30m</b>

The duration of the additional program can be programmed for between 1 and 999 minutes.

<b>Step no:</b>	<b>16.3</b>
<b>Switch SV</b>	<b>Y/N</b>

SV closed (program Yes) or opened (program No) during additional program before regeneration.

## 17. Additional program 3

See also Step 15 for details.

<b>Step no:</b>	<b>17.1</b>
<b>Start phase:</b>	<b>2</b>

You can determine the start phase for additional program 3.

<b>Step no:</b>	<b>17.2</b>
<b>Time</b>	<b>40m</b>

The duration of the additional program can be programmed for between 1 and 999 minutes.

<b>Step no:</b>	<b>17.3</b>
<b>Switch SV</b>	<b>Y/N</b>

SV closed (program Yes) or opened (program No) during additional program before regeneration.



## 18. Flush

<b>Step no:</b>	<b>18.1</b>
<b>Flush time</b>	<b>20s</b>

Calculate the flush time (range 1 to 999 seconds)

<b>Step no:</b>	<b>18.2</b>
<b>Interv.</b>	<b>500l</b>

This is the setting for the amount of treated water to be supplied between flushes.  
The permissible range is 1 to 99.999 litres.

## 19. Flow pulse

<b>Step no:</b>	<b>19.1</b>
<b>Pulse time</b>	<b>1.0s</b>

For every impulse of the water meter the relay with output function FP operates once. These output pulses can be used for control of a dosing pump or a dosing monitoring system or to operate a remote flow rate measuring/control system.  
If the interval between successive water meter pulses/contacts is less than the programmed output duration the impulses are stored by the control and the output relay reactivated the appropriate number of times. There is an interval of 0,5 sec between output pulses.  
Programmable pulse time (range 0,2 to 999,9 seconds).

## 20. Alarm

<b>Step no:</b>	<b>20.1</b>
<b>PF- DI- DY- WA-</b>	

You can determine on which event the output function AL has to be activated.

PF = power failure

DI = minimum regeneration distance(not programmable if step 5.1 at No)

DY = prohibited regeneration (not programmable if step 3.1 at No)

WA = input 'Wait' (not programmable if step 22.1 not at WA)

<b>Step no:</b>	<b>20.2</b>
<b>RC- CE- PC-</b>	

You can determine on which event the output function AL has to be activated.

RC = chemical tank

CE = installation capacity exceeded (not programmable if simplex installation)

PC = pre contact (not programmable if step 9.1 at No)



## 21. Warning

<b>Step no:        21.1</b> <b>PF- DI- DY- WA-</b>
---

You can determine on which event the output function MF has to be activated.

PF = power failure

DI = minimum regeneration distance (not programmable if step 5.1 at No)

DY = prohibited regeneration (not programmable if step 3.1 at No)

WA = input 'Wait' (not programmable if step 22.1 not at WA)

<b>Step no:        21.2</b> <b>RC- CE- PC-</b>
---

You can determine on which event the output function MF has to be activated.

RC = chemical tank

CE = installation capacity exceeded (not programmable if simplex installation)

PC = pre contact (not programmable if step 9.1 at No)

## 22. Input 5

<b>Step no:        22.1</b> <b>WA SP</b>
---

You can determine the input function for input 5.

WA = input 'Wait'

SP = input 'Service Stop'

<b>Step no:        22.2</b> <b>Main valve onY/N</b>
--

You can determine whether the service valve should be opened or closed during input Wait was detected at the start of the regeneration.

Note : Not selectable in alternating service as this system switches over to the standby filter.



## 23. "Start" input

### Regeneration delay 1

Step no:	23.1
Reg. Delay 1	600s

This time setting (0-999 seconds) determines the number of seconds the "Start" input is blocked after a new regeneration or a filter changeover, for instance to wait for a new analysis by a water hardness meter.

### Regeneration delay 2

Step no:	23.2
Reg. Delay 2	10s

This time setting (0-999 seconds) determines a delay period for the "Start" input.

## 24. Maintenance

You can determine whether a "MAINTENANCE" message is shown on the LCD display after a set supply quantity and whether the relay outputs "warning" and/or "fault" are activated when this message is displayed.

NOTE: This program step can only be called up by the appropriate service company.

Step no:	24.1
Maintenance	Y/N

Step no:	24.2
Interv.	50000m3

You can set a service interval from 1 to 999,999 m3.

Step no:	24.3
Alarm	Y/N

The fault relay can be activated in addition to the LCD display.


Step no:	24.4
Warning	Y/N

The report relay can be activated in addition to the LCD display.



# Connection terminals ES2070 TV

ES2070 TV - 24 V : no control lamp in the main switch

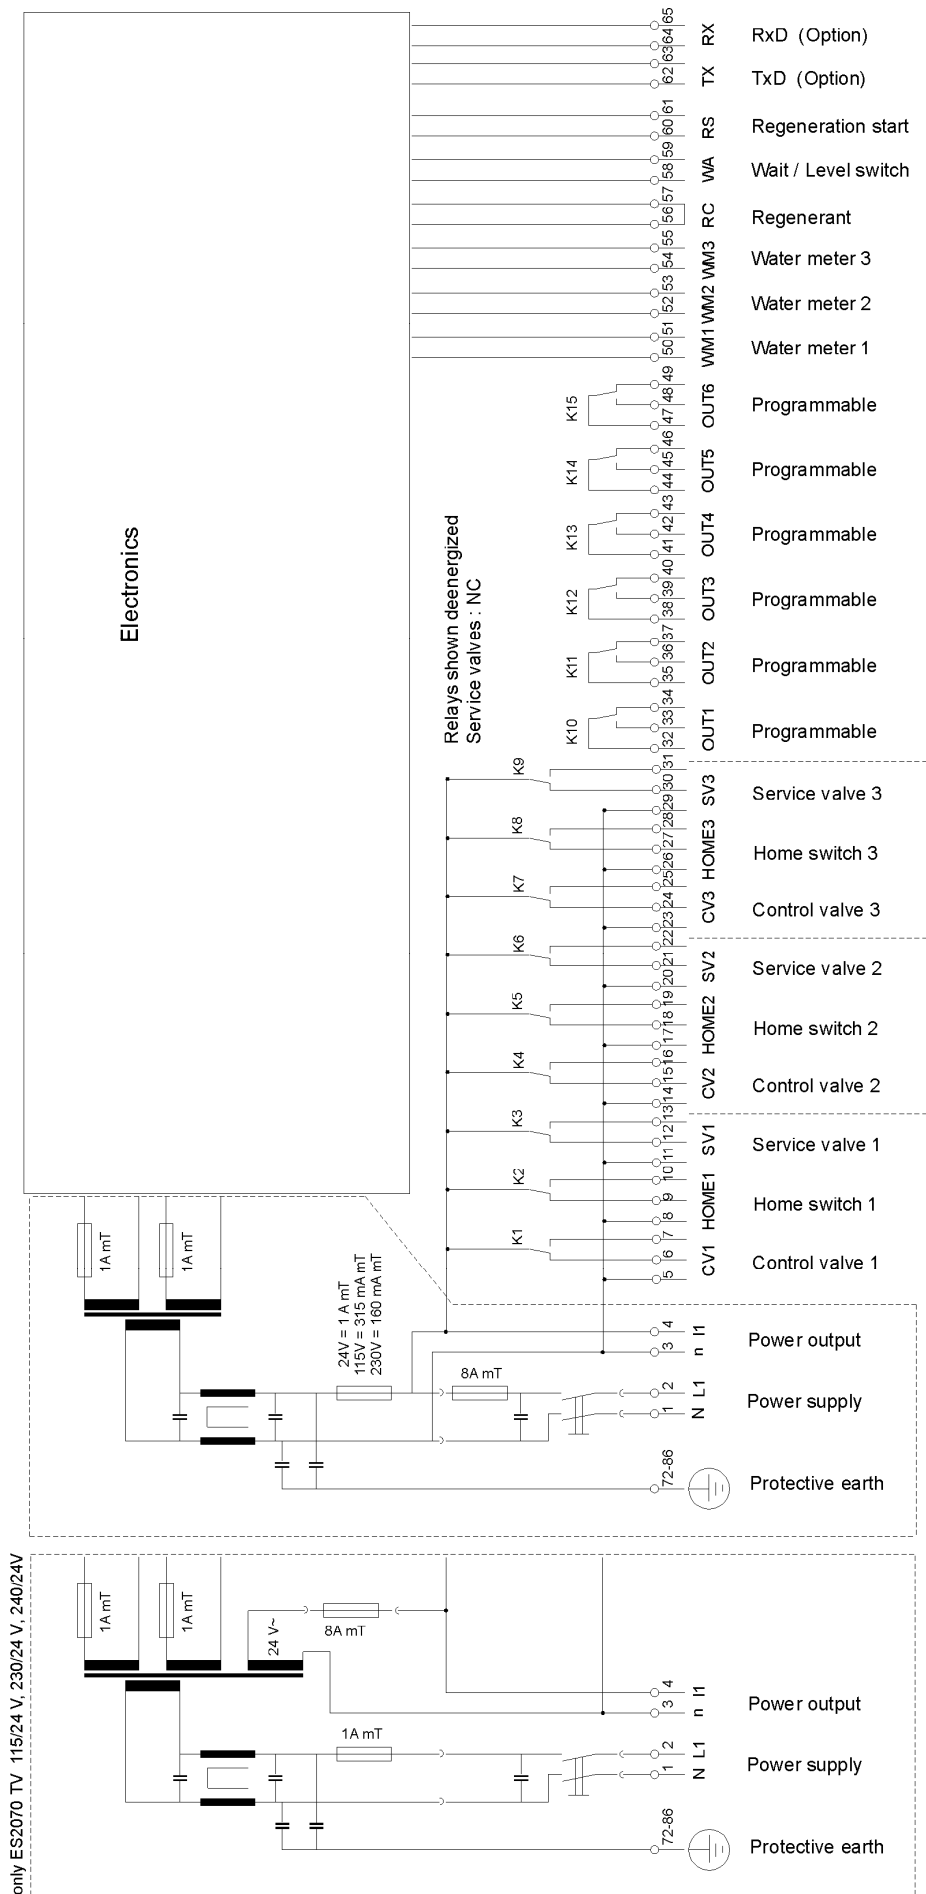



# Installation and commissioning

## General

Installation and commissioning of the control system may only be carried out by trained specialists who are familiar with these operating instructions and the applicable regulations on safe working practices and accident prevention. The instructions given in this manual must always be observed and followed.

To guarantee functional operation and safety, the instructions in this manual must be followed. The manufacturer accepts no liability for damage resulting from failure to follow the instructions.

## Assembly

- Do not install under damp pipes. Fit shielding if necessary.
- Install device at eye level and easily accessible to the user.

## Connection

- Before carrying out connection work, always ensure the control unit is first disconnected from the power supply. Make sure that the power supply remains disconnected during connection work.
- Make electrical connections. Observe local regulations.  
Connect supply voltage and ground to the terminals shown in the wiring diagram.
- Make sure that the ground connection is faultless.
- The front panel is connected to ground via a plug connection which must not become disconnected during operation.
- If possible, keep all extra low voltage cabling (digital inputs, measurements) separate from the power supply cable.
- It is not permitted to connect the potential-free relays with a combination of 230 VAC and extra low voltage.
- Some external relays, magnetic switches, solenoid valves, etc. can cause unwanted interference pulses when switched off.  
For this reason, it is recommended that the components mentioned should be equipped with a so-called RC network in advance.  
Ask the supplier of the mentioned components for the correct type of RC network.

## Maintenance

The control system does not contain any user-serviceable parts. Unauthorised modifications and/or repairs to the control unit will void all warranty claims and the manufacturer's liability.

## Commissioning

- Keep front lid closed at all times
- The control system may only be switched on if it is completely closed and all connections have been made correctly.




# Technical specifications.



<b>Electrical supply:</b>	24 V $\pm$ 10% 50-60 Hz fuse 8A mT
	115 V $\pm$ 10% 50-60 Hz fuse 8A mT
	230 V $\pm$ 10% 50-60 Hz fuse 8A mT
	115/24V $\pm$ 10% 50-60 Hz fuse 8A mT
	230/24V $\pm$ 10% 50-60 Hz fuse 8A mT
	240/24V $\pm$ 10% 50-60 Hz fuse 8A mT
<b>Power consumption control circuit:</b>	96 VA
<b>Powered outputs:</b>	24V, 115V, 230V : Total continuous current 8 A
	115/24V, 230/24V, 240/24V : Total continuous current 4 A
<b>Potential free outputs:</b>	Maximum load on relay contacts 250V / 8A
<b>Potential free inputs:</b>	Contacts loaded up to a max. 9V 8 mA
<b>Protection class:</b>	IP 65
<b>Ambient temperature:</b>	0 - 40 C
<b>Weight:</b>	approximately 4,4 kg (24V, 115V, 230V)
	approximately 5,4 kg (115/24V, 230/24V, 240/24V)
<b>Dimensions:</b>	W x H x D = 390 x 318 x 160

Equipment is protected against zero voltage.

 **ATTENTION:** Some external relays, magnetic switches, magnetic valves, etc. can cause undesirable interference pulses when switching off. For this reason it is recommended to provide the components mentioned, in advance, with a "RC-network".  
Inquire at the supplier of the components mentioned for the correct type of RC-network.



# Declaration of conformity

Declaration of conformity of the product with the essential requirement of the EMC directive 89 / 336 / EEC.

## Product description

Product name : Controller for water softening installations  
Product type : ES2070TV  
: EWS Equipment for Water treatment Systems International B.V.  
Australiëlaan 12  
NL-5232 BB 's-Hertogenbosch  
The Netherlands

## Product environment

This product is intended for use in residential en light industrial environments.

Emission standard : EN 61000-6-4, EN 55022  
Immunity standard : EN 61000-6-1, EN 61000-6-2  
Low voltage directive : 2006/95/EG

## Report

Report number : EWS EMC / ES2070\_02

## This declaration was issued by :

Date : 11-03-2020

Name : V. Naeber

Signature :



## **FIVE-YEAR CONTROLLER LIMITED WARRANTY**

### **LIMITED WARRANTY**

EWS International (hereafter EWS) warrants her products free from defects in material and workmanship under the following terms.

In this warranty, "Products" shall be taken to mean all devices that are supplied pursuant to the contract with exception of software.

### **VALIDITY OF THE WARRANTY**

Labour and parts are warranted for five years from the date of the first customer purchase. This warranty is only valid for the first purchase customer.

Notwithstanding the warranty period of five years as mentioned above - while upholding the remaining provisions – a warranty period of three months applies to the supply of software.

### **COVER OF THE WARRANTY**

Subject to the exceptions as laid down below, this warranty covers all defects in material or workmanship in the EWS products. The following are not covered by the warranty:

- 1) Any product or part not manufactured nor distributed by EWS. EWS will pass on warranty given by the actual manufacturer of products or parts that EWS uses in the product.
- 2) Any product, on which the serial number has been defaced, modified or removed.
- 3) Damage, deterioration or malfunction resulting from:
  - a) Accident, misuse, neglect, fire, water, lightning or other acts of nature.
  - b) Product modification or failure to follow instructions supplied by the products.
  - c) Repair or attempted repair by anyone not authorized by EWS.
  - d) Any shipment of the product (claims must be presented to the carrier)
  - e) Removal or installation of the product
  - f) Any other cause, which does not relate to a product defect.
  - g) Cartons, equipment enclosures, cables or accessories uses in conjunction with the product.

### **FINANCIAL CONSEQUENCES**

EWS will only pay for labour and material expenses for covered items, proceed from repairs and updates done by EWS at the EWS location. EWS will not pay for the following:

- 1) Removal or installations charges at customers and/or end user location.
- 2) Costs for initial technical adjustments (set-up), including adjustment of user controls or programming.
- 3) Shipping charges proceed from returning goods by the customer. (Shipping charges for returning goods to the customer are for the account of EWS).

All the costs which exceed the obligations of EWS under this Warranty, such as, but not limited to, travel and accommodation costs and costs for assembly and dismantling are for the account and risk of the customer.

### **WARRANTY SERVICE**

In order to retain the right to have a defect remedied under this warranty, the customer is obliged to:

- 1) Submit complaints about immediately obvious errors related to the products delivered, in writing within eight days of the delivery of the products and submit complaints about shortcomings relating to the products delivered, which are not visible, within eight days of their being discovered.
- 2) Return defected products for account and risk of the customer. Costs for this shipment will not be reimbursed by EWS. The products may only be returned following express, written permission from EWS. Returning the products does not affect the obligation to pay the invoiced amounts.



- 3) Present the original dated invoice (or a copy) as proof of warranty coverage, which must be included in any [of the] return shipment of the product. Please include also in any mailing a contact name, company, address and a description of the problem(s).

#### **LIMITATION OF IMPLIED WARRANTIES**

Except where such disclaimers and exclusions are specifically prohibited by applicable law, the foregoing sets forth the only warranty applicable to the product, and such warranty is given expressly and in lieu of all other warranties, express or implied, or merchantability and fitness for a particular purpose and all such implied warranties which exceed or differ from the warranty set forth herein are hereby disclaimed by EWS.

#### **EXCLUSION OF DAMAGES**

EWS' liability for any defective products is limited to the repair or replacement of the product at our option. Except where such limitations and exclusions are specifically prohibited by applicable law EWS shall not be liable for:

- 1) Damage to other property caused by defects in the EWS product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss or;
- 2) Any damages, whether incidental, [consequential or otherwise] special, indirect or consequential damages, injury to persons or property, or any other loss.

Under no circumstances whatsoever shall EWS be obliged to provide compensation beyond the direct damage incurred by customer up to an amount not exceeding the payment receivable from the insurer of EWS in connection with the damage

#### **APPLICABLE LAW AND DISPUTES**

- 1) Dutch law shall govern all offers made by EWS and all agreements concluded between EWS and customer. This warranty explicitly excludes application of the Vienna Sales Convention (CISG).
- 2) All disputes which may arise between the parties shall be dealt with exclusively by the competent court of law in the Netherlands under whose jurisdiction EWS falls. However, EWS reserves the right to submit any disputes to the competent court in the customer's location.